



**polspotten.nl**  
**global-from-holland**

---

## **Zig Zag**

designed by **pols potten studio**  
**510-070-series**

“Thank you for choosing a pols potten product.  
To ensure safe and satisfactory use of this product,  
please carefully read the below instructions beforehand.”

## care instructions

### how to avoid scratches?

- Gently wipe the dust from the surface with a clean and soft cloth.
- Clean the surface with lukewarm water and a soft, dust free cloth. Do not use a cream surface cleaner.
- Furniture pieces finished with a high polish varnish are sensitive to contact with shoes.

### caution!

- Hot consumptions (temperatures above 50 degrees Celsius), for example mugs, cups and plates will cause permanent mat areas to the surface. The use of coasters is advised.
- Keep out of direct sunlight and away from heat sources.

### regular maintenance

- Pure beeswax furniture polish will maintain the shine of your Zig Zag.

## safety note

- Always lift the furniture when moving it. Please take care when handling or moving the furniture as careless handling may cause damage or injury.
- Never tilt the furniture. Ensure the furniture is always placed firmly on the ground.
- Do not stand, climb or jump on the furniture.
- Please keep these instructions for future reference.
- 120 kg max. load.

