




E I C H H O L T Z


109689 FOLDING SCREEN MADEMOISELLE GABRIELLE

INSTRUCTION


1 Remove all the screws and take the carton from the crate.

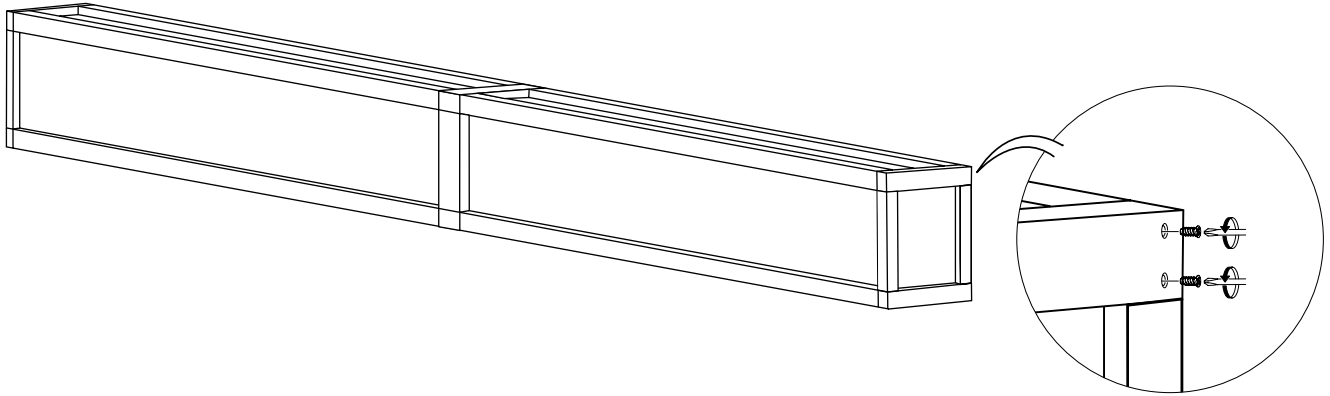


2 Carefully cut the tape in the length of the cartons with a knife blade not longer than 2,5 cm to avoid damage to the folding screen. Remove the carton and plastic.

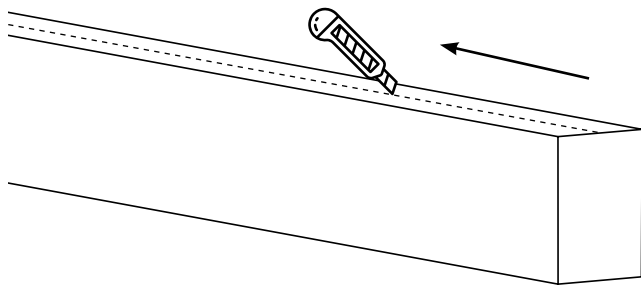

3 Now, open the plastic and stand the article vertically with the ball feet on the ground.

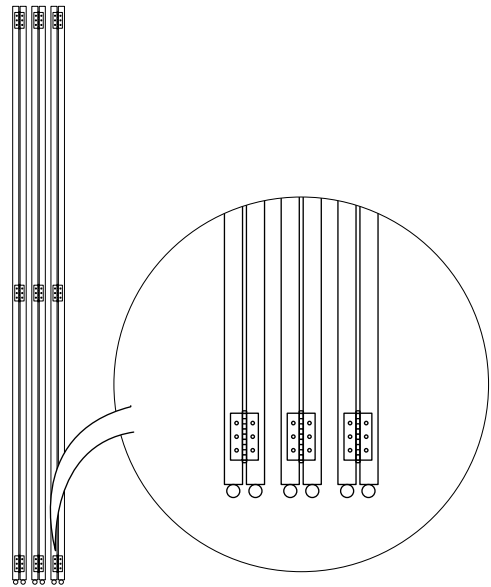

4 Extend the screen and remove the protection material between the panels.

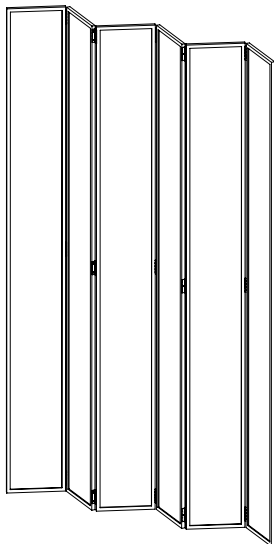

5 If there is a balance issue, adjust the ball feet by turning the ball feet.

