



DENNIS

bed
bett
lit

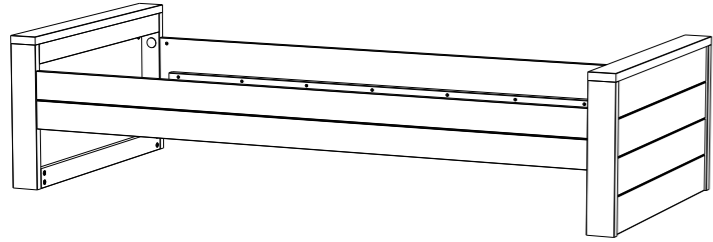

 000103 20 x	 000102 30 x	 000601 8 x	 000206 16 x	 000607 1 x	 000138 1 x
 000136 8 x	 000107 8 x	 000135 8 x	 000137 8 x	 000139 6 x	 000114W 6 x

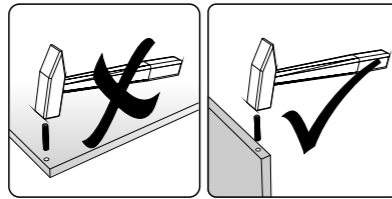

1

2x

24 MM A
6x16MM L
000103 20 x
000114W 4 x

P-LV-RA

24 MM A
6x16MM L
000103 10 x
000114W 2 x

15 GR E
000607 1 x

P-RV-LA

2

2x

24 MM A
6x16MM L
000103 10 x
000114W 2 x

P-LV-RA

24 MM A
6x16MM L
000103 10 x
000114W 2 x

15 GR E
000607 1 x

P-RV-LA

3

2x

15 MM B
000102 30 x

P-RV-LA

PO

KS

AL

P-LV-RA

4

2x

20x12MM K
000139 6 x

P-RV-LA


PB

K




Produced by De Eekhoorn Woodworkings BV

5 2x

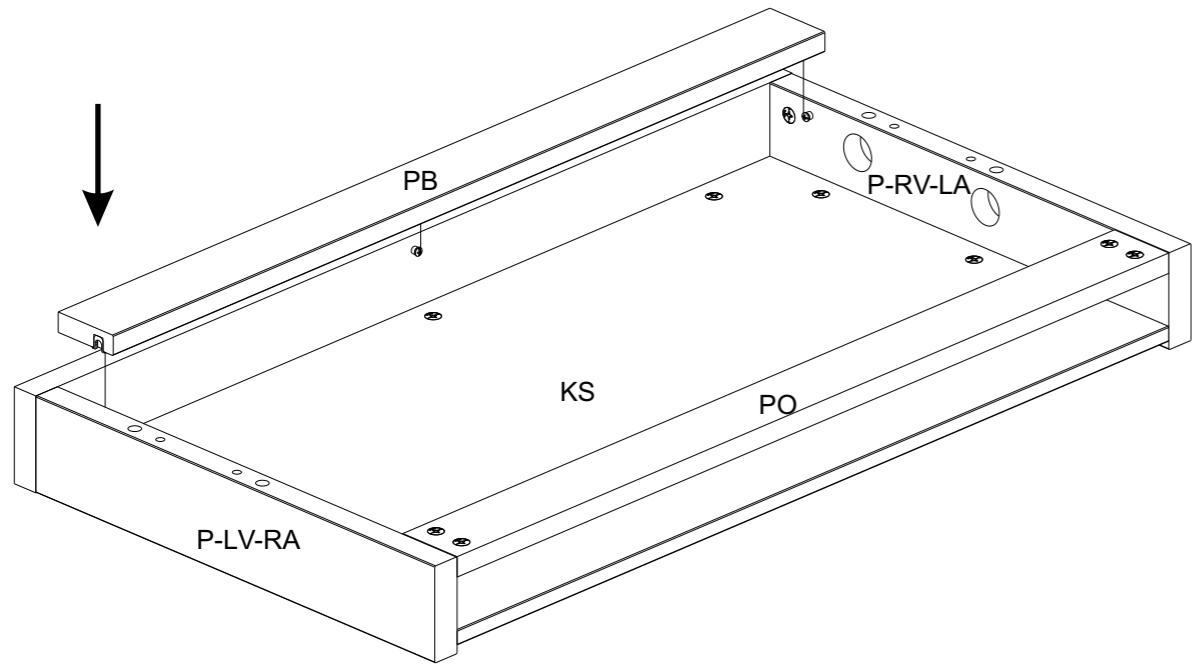

- 6
- | | | | | | | | | | |
|--------|----------|--------|----------|--------|----------|--------|----------|--------|----------|
| | C | | D | | E | | G | | H |
| 000601 | 8x | 000206 | 16x | 000607 | 1x | 000136 | 8x | 000107 | 8x |

Het gebruik van een klein beetje houtlijm is noodzakelijk voor een goede verbinding
 Für eine stabile Verbindung ist ein bisschen Holzleim erforderlich
 Un peu de colle à bois est nécessaire pour un assemblage solide
 The use of a little wood glue is necessary for proper connection

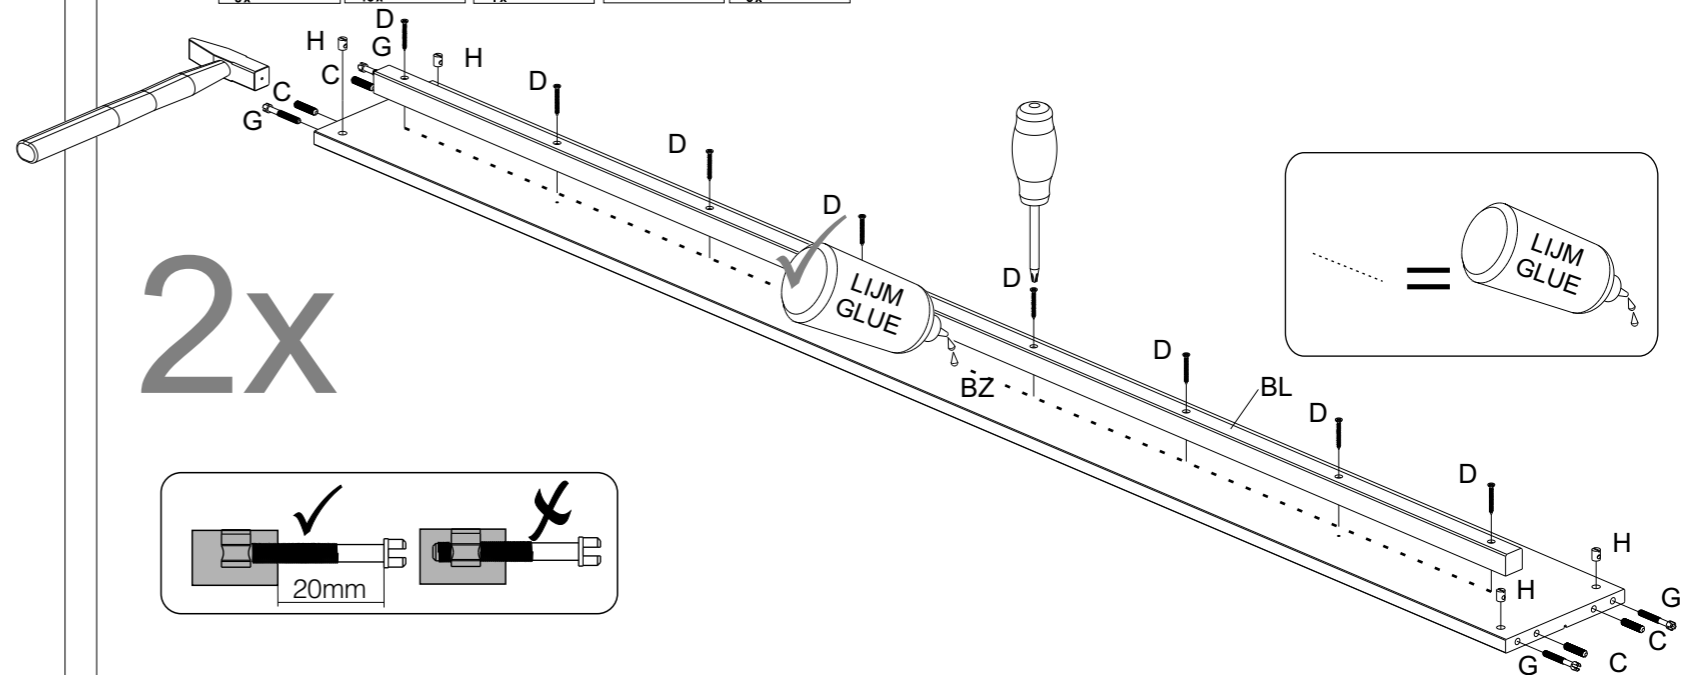

- 7
- | | | | | | |
|--------|----------|--------|----------|--------|----------|
| | I | | F | | J |
| 000135 | 8x | 000138 | 1x | 000137 | 8x |

